

Chapel Quick Reference Guide

Start Screen

Touch the start button on the screen to start the system.



Chapel Quick Reference Guide

AUDIO

Adjust the volume for individual microphones and the presentation audio.


The screenshot shows the audio control interface with the following components:

- POWER:** A power button icon in the top right corner. Callout: "Press to turn the system off. Confirmation box will appear."
- VOLUME:** A callout pointing to the volume sliders. Text: "Control the microphone and source volume. Up to increase and down to decrease. Slider bar shows overall volume level. Mute source at the bottom."
- Audio Controls:** Five columns of controls for "Program", "Wireless 1", "Wireless 2", "Floorbox Mic", and "Lectern Mic". Each column has a vertical slider with a yellow knob, a "+" sign at the top, a "-" sign at the bottom, and a speaker icon at the bottom.

Chapel Quick Reference Guide

VIDEO

Change the source that will be routed to the room.

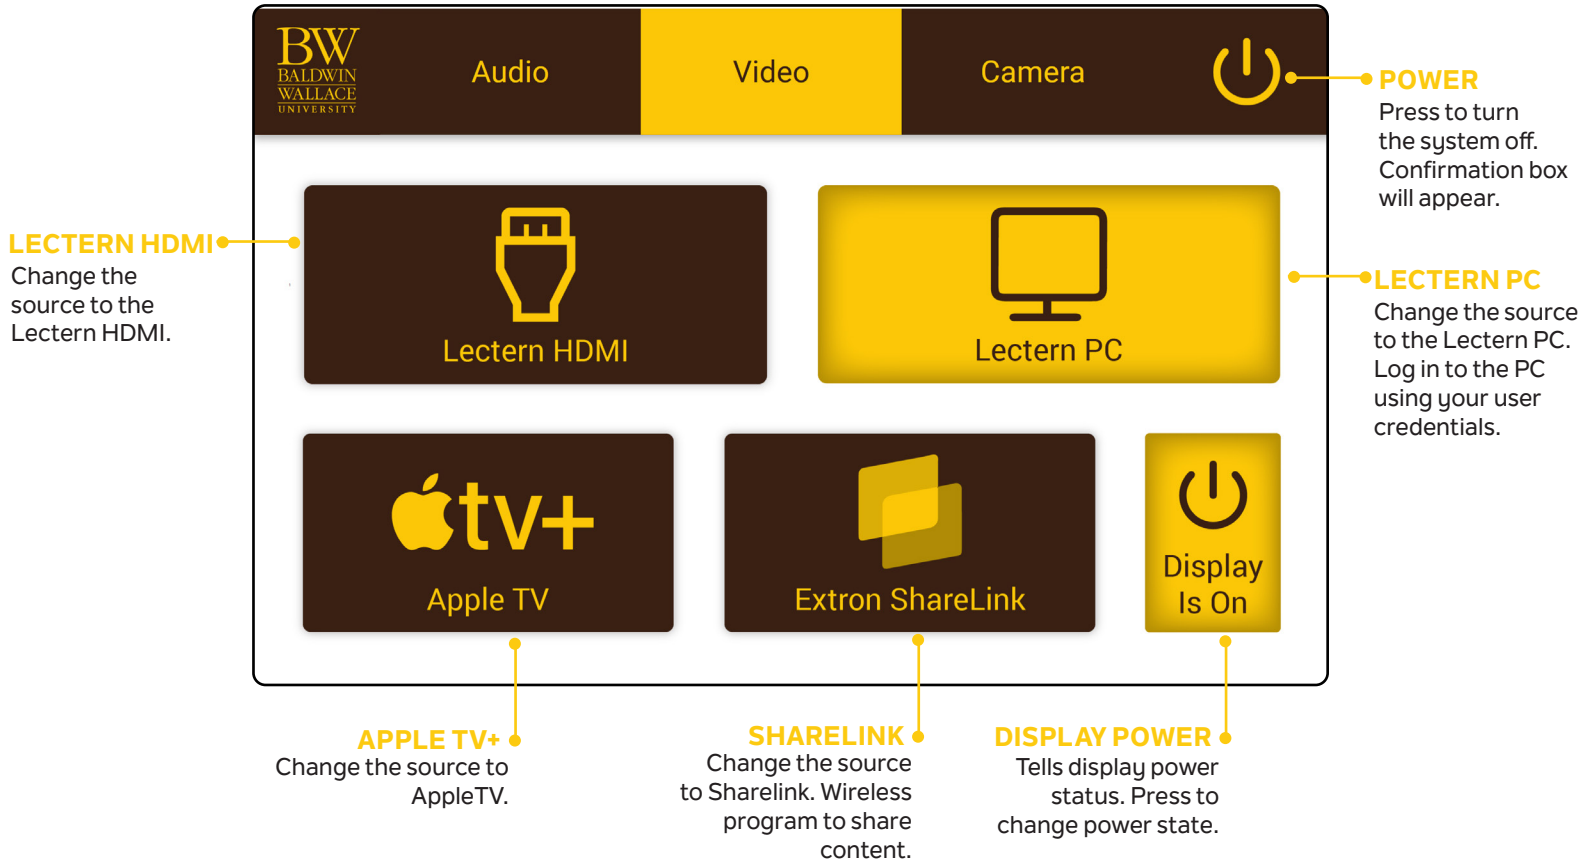

Chapel Quick Reference Guide

CAMERA

Control the camera position and recall presets. Presets can be set by positioning the camera to the desired location and pressing and holding on a preset button for 3 seconds.

The screenshot shows a control interface with a top navigation bar containing 'Audio', 'Video', and 'Camera' (highlighted in yellow), along with a power icon. A central control panel includes zoom in (+) and zoom out (-) buttons, directional arrows (up, down, left, right), and a camera icon. Below this are three preset buttons labeled 'Preset 1', 'Preset 2', and 'Preset 3'. Callouts provide instructions for each feature.

CAMERA CONTROL • Control the positioning of the camera. Arrows move the camera left, right, up and down. Then + to zoom in and - to zoom out.

PRESETS • After setting the camera to desired position press and hold the preset button for 3 seconds to save.

POWER • Press to turn the system off. Confirmation box will appear.

Chapel Quick Reference Guide

Shutdown Page

After pressing the POWER icon in the top right, a confirmation box will appear. Cancel to keep the system on and Confirm to shut the system down.

